marantz[•]

CD Receiver M-CR611

Quick Setup Guide

Start Here Starten Sie hier Commencez ici Iniziare qui Iniciar aquí Begin hier Starta här Начните здесь Zacznij tutaj

Before you begin

What's In The Box











M-CR611

Power cord

Remote and batteries

Product manual on CD-ROM

DAB/FM antenna

Required For Setup







Speaker cables

Network router

Speakers

Optional





iOS device and USB cable

Router with WPS



Network cable

* For detailed instructions or assistance, please refer to the enclosed CD-ROM manual or visit our support site: www.marantz.com





Polski Русский Svenska Nederlands Español Italiano Français Deutsch E	Englist
---	---------

1. Connection



2. Connecting to your home network

Choose from one of the following options





3. Enjoying your music!

Enjoying Internet radio

- 1 Press the "INTERNET RADIO"
 - button on the remote





Enjoying music using Apple AirPlay

1 Open Control Center (iOS 7 and later) by swiping up from the bottom of your screen, then tap AirPlay



2 Select the "Marantz M-CR611" from the AirPlay Device list



Note: Make sure your iOS device is on the same network as the M-CR611

Download the Marantz "Hi-Fi Remote" app

Scan the QR code to download and install the Marantz "Hi-Fi Remote" app using your smartphone and a scanning app or manually search the Apple App store or Google Play store for the "Marantz Hi-Fi Remote"



P	Polski	Русский	Svenska	Nederlands	Español	Italiano	Français	Deutsch	Englis
---	--------	---------	---------	------------	---------	----------	----------	---------	--------

Enjoying music using Bluetooth

1 Press INPUT to select Bluetooth, then press and hold the Input button until [Pairing Mode] is displayed



3 Select "Marantz M-CR611" from the Bluetooth device list on

your mobile device Some devices may required you to verify the numeric code and press ENTER on the M-CR611



To reconnect a previously paired Bluetooth device, start at step 2.

Activate Bluetooth on your mobile device





Play music using any app on your device



N Pair and connect your NFC capable device by gently touching it on the NFC logo on the top of M-CR611.

Basic trouble shooting

No sound:

- Check all connections.
- Make sure the bare metal wire ends of the speaker wires are in contact with the metal part of the speaker terminals.

Additional information

For more information about this product, scan the QR code using your mobile deviceor visit Marantz Support at: manuals.marantz.com/MCR611/EU/EN/



www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

mapantz^{*} is a registered trademark.

Printed in China 5411 11302 00AM Copyright © 2015 D&M Holdings Inc. All Rights Reserved.